16-12-2021

# Flux - Shelf Panels

## FL-IS1 - FL-IS2 - FL-TS1 - FL-TS2

## ASSEMBLY INSTRUCTIONS

Flux
Shelf Panels

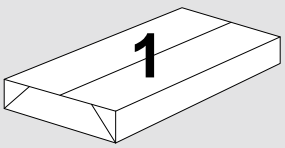


Pack 1:
1x Shelf Panel

KEEP FITTINGS AWAY
FROM CHILDREN

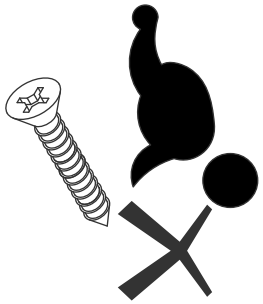

IF UNSURE CALL
FOR ASSISTANCE

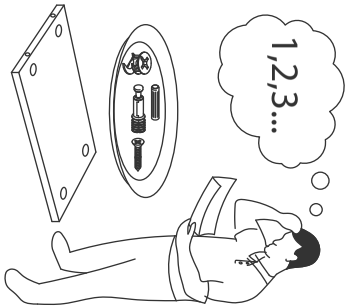


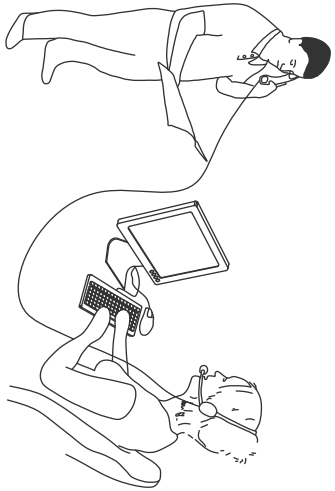

ALWAYS HANDLE
ITEMS WITH CARE

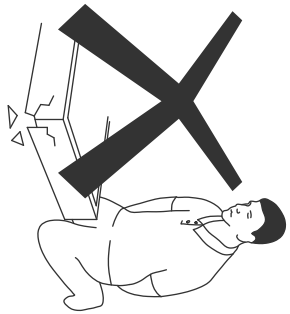

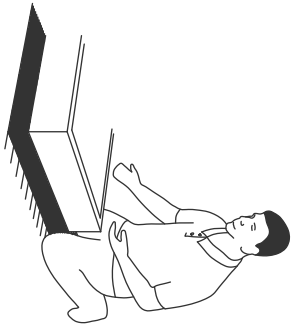

DONT STRUGGLE
2 MAN LIFT

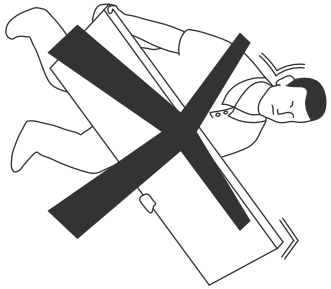

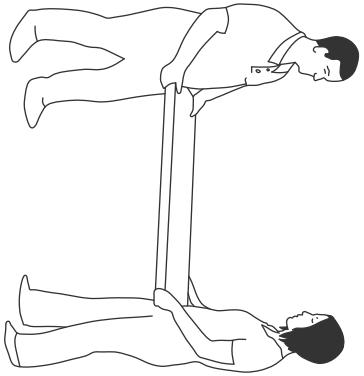

TOOLS REQUIRED
FOR ASSEMBLY

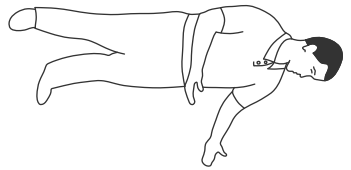





## Please check that you have all the panels

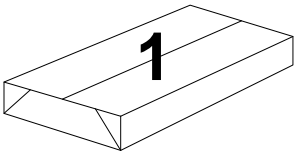


PACK 1:
1 x Shelf

378 x 378mm = FL-IS1
778 x 378mm = FL-IS2
420 x 420mm = FL-TS1
820 x 420mm = FL-TS2

FL-IS1

FL-IS2

FL-TS1

FL-TS2

## Please check that you have all the fittings

FITTINGS SUPPLIED

Knock-in Insert

| Size | PCS |
|---|---|
| 13mm | 4 |

Screw-in Pin

| Size | PCS |
|---|---|
| 13mm | 4 |

# FLUX SHELF ASSEMBLY

## 1

Step 1

Unpack your new Flux shelf panel and please recycle all packaging.

## 2

Step 2

Insert the 4x nylon knock-in inserts into the holes located on the underside of the base.

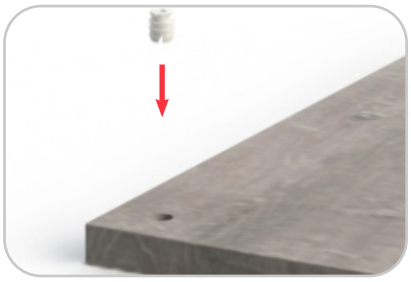

## 3

Step 3

Screw the 4x M4 steel pins into the nylon inserts.

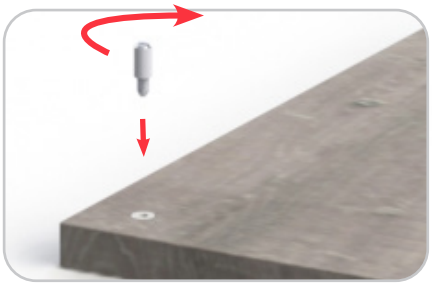

# 4

Step 4

Position the shelf into the frame as shown

16-12-2021

# Flux - Cubby Units

## FL-CB1 - FL-CB2 - FL-CS1

## ASSEMBLY INSTRUCTIONS

Flux
Cubby Units

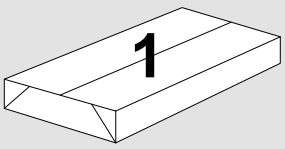


Pack 1:
1x Top, Base &
Side Panels

KEEP FITTINGS AWAY
FROM CHILDREN

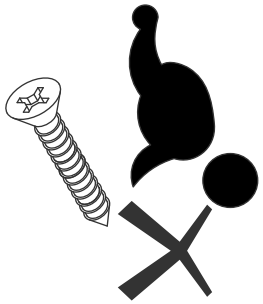

IF UNSURE CALL
FOR ASSISTANCE

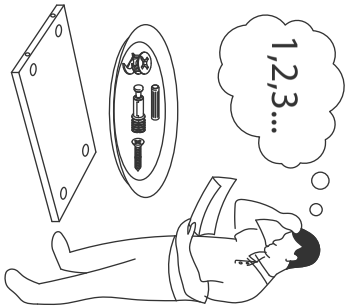


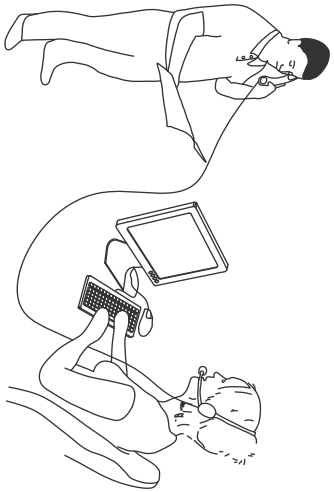

ALWAYS HANDLE
ITEMS WITH CARE

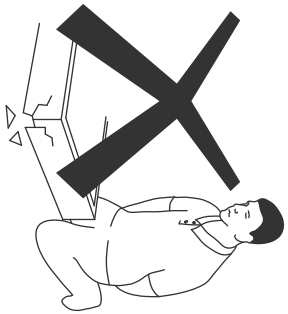

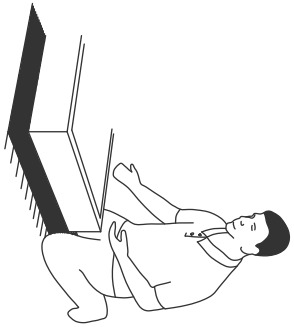

DONT STRUGGLE
2 MAN LIFT

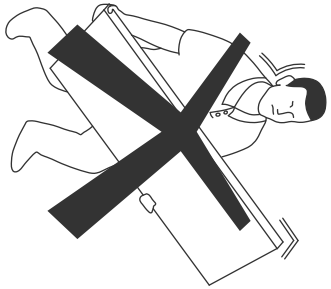

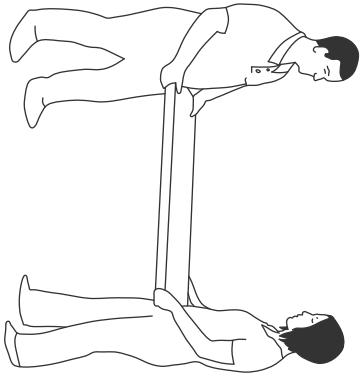

TOOLS REQUIRED
FOR ASSEMBLY

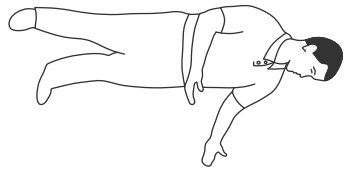





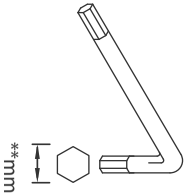

## Please check that you have all the panels

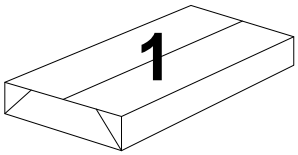


PACK 1:
1 x Cubby

378 x 378mm = FL-CB1
778 x 378mm = FL-CB2
378 x 189mm = FL-CS1

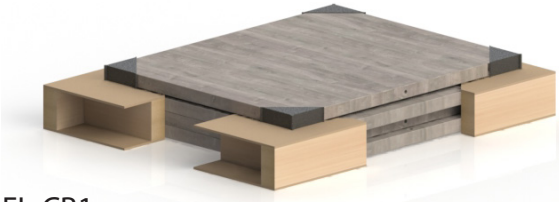

FL-CB1

FL-CB2

FL-CS1

## Please check that you have all the fittings

FITTINGS SUPPLIED

Confirmate Screw

| Size | PCS |
|---|---|
| 50mm | 6 |

Knock-in Insert

| Size | PCS |
|---|---|
| 13mm | 4 |

Knock-in Dowel

| Size | PCS |
|---|---|
| 36mm | 6 |

Screw-in Pin

| Size | PCS |
|---|---|
| 13mm | 4 |

# FLUX CUBBY ASSEMBLY

## 1

Step 1

Unpack your new cubby unit and please recycle all packaging.

## 2

Step 2

Insert the 6x dowels into the side panels, and tap gently in with a hammer / mallet.

## 3

Step 3

Insert the 4x nylon knock-in inserts into the holes located on the underside of the base.

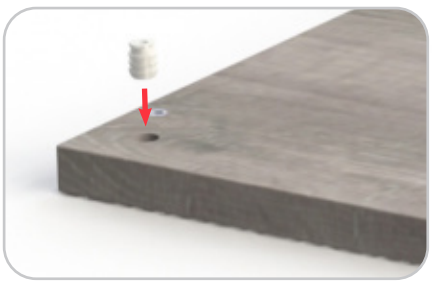

# 4

Step 4

Position the sides underneath the base panel

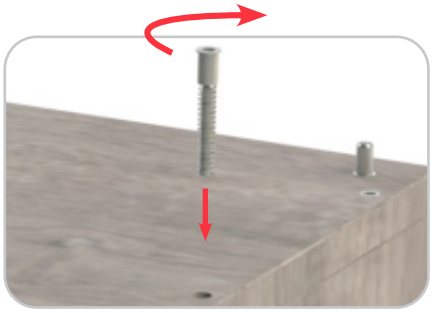

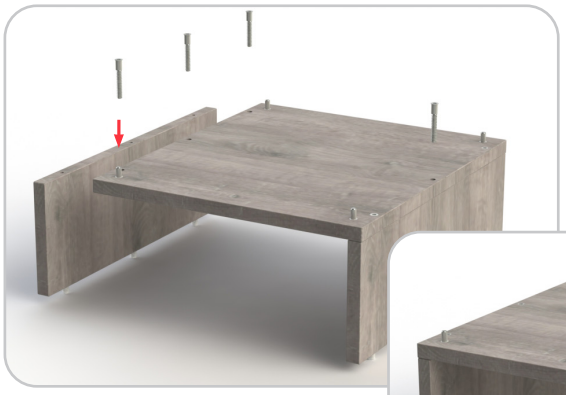

Locate and tighten the 6x confirmat screws clockwise

# 5

Step 5

Turn-over the cubby and place the top panel and tap in place.

# 6

Step 3

Locate the cubby into the frame and from the underside screw in the 4x M4 steel pins.

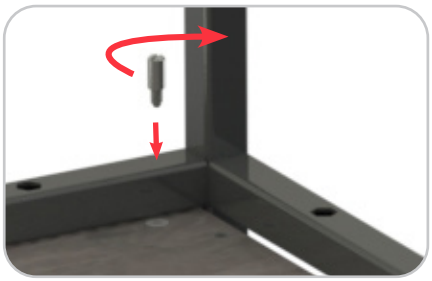

17-12-2021

# Flux - Planter Units

## FL-PL1 - FL-PL2

## ASSEMBLY INSTRUCTIONS

Flux
Planter Units

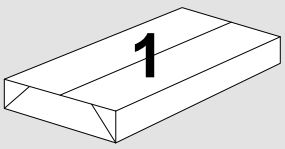


Pack 1:
1x Base & Side Panels

KEEP FITTINGS AWAY
FROM CHILDREN

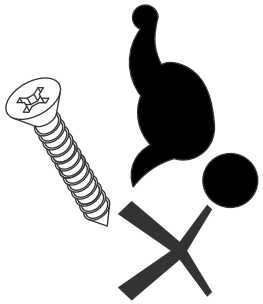

IF UNSURE CALL
FOR ASSISTANCE

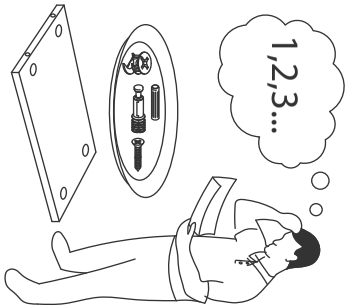


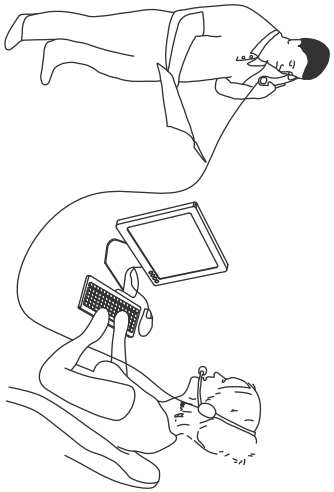

ALWAYS HANDLE
ITEMS WITH CARE

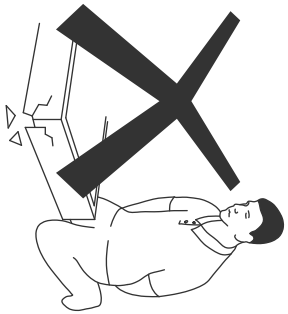

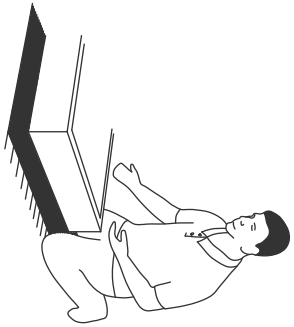

DONT STRUGGLE
2 MAN LIFT

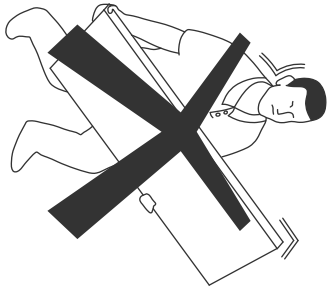

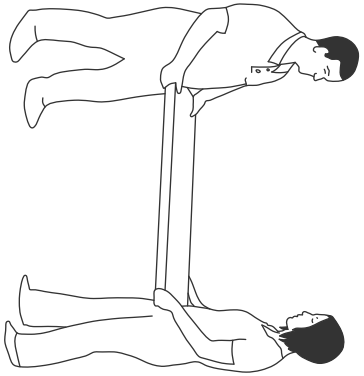

TOOLS REQUIRED
FOR ASSEMBLY

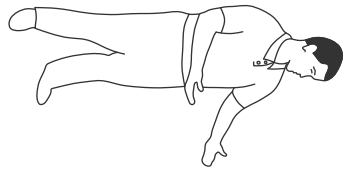





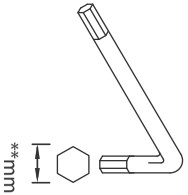

## Please check that you have all the panels

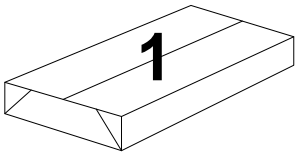


PACK 1:
1 x Planter

378 x 378mm = FL-PL1
778 x 378mm = FL-PL2

FL-PL1

FL-PL2

## Please check that you have all the fittings

FITTINGS SUPPLIED

Confirmat Screw

| Size | PCS |
|---|---|
| 50mm | 10 |

Knock-in Insert

| Size | PCS |
|---|---|
| 13mm | 4 |

Knock-in Pin

| Size | PCS |
|---|---|
| 24mm | 8 |

Screw-in Pin

| Size | PCS |
|---|---|
| 13mm | 4 |

Wooden Dowel

| Size | PCS |
|---|---|
| 6 x 30mm | 8 |

# FLUX PLANTER ASSEMBLY

## 1

Step 1

Unpack your new Flux planter unit and please recycle all packaging.

## 2

Step 2

Insert the 8x dowels into the side panels, and tap gently in with a hammer / mallet.

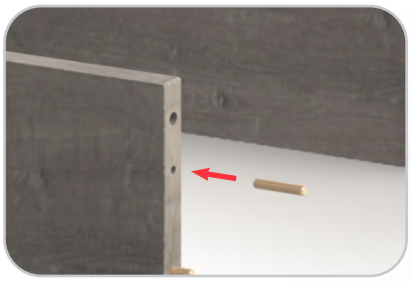

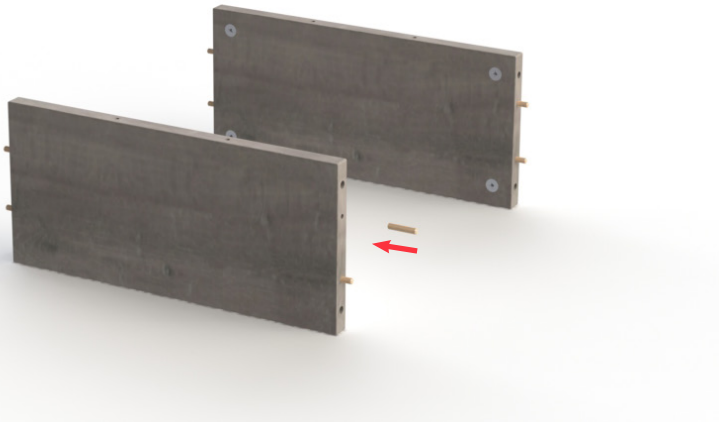

## 3

Step 3

Insert the 8x knock-in pins into the holes located on the side panels as shown.

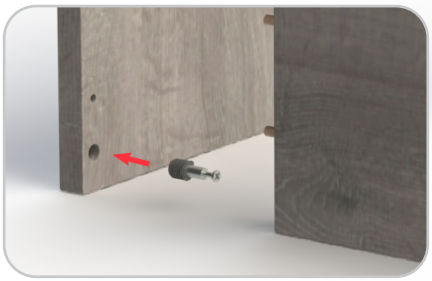

# 4

Step 4

Align the pins in the sides to the facia panels and slot in place (ensure the cam arrow is facing the panel edge)

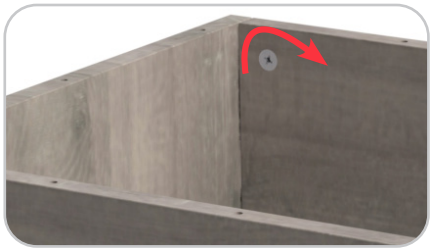

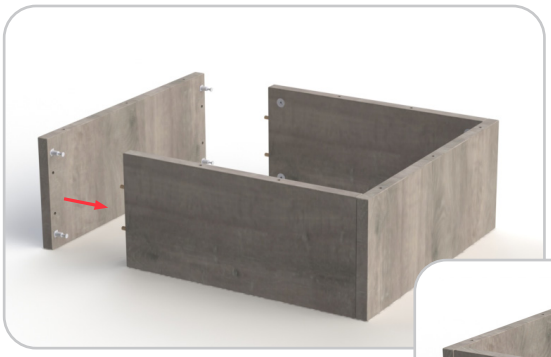

Once both panels are positioned, turn the minifix cam clockwise to tighten to secure.

# 5

Step 5

Insert the 4x knock-in inserts into the holes located on the base panel as shown.

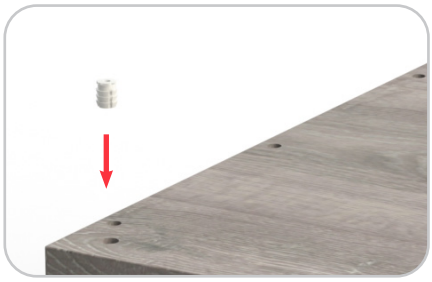

# 6

Step 6

Locate and align the fixing holes on the base panel to the sides & facias and affix with the comfirmat screws as shown.

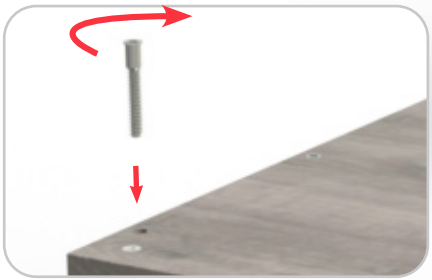

# 4

Step 4

Screw the 4x M4 steel pins into the inserts as shown.

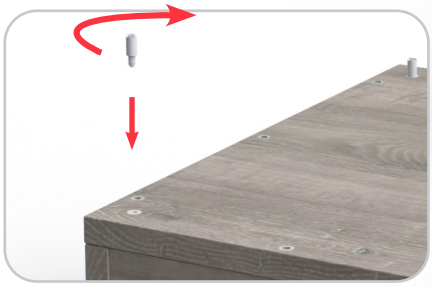

# 5

Step 5

Turn-over the planer and place on on top of the desired frame.

# 6